


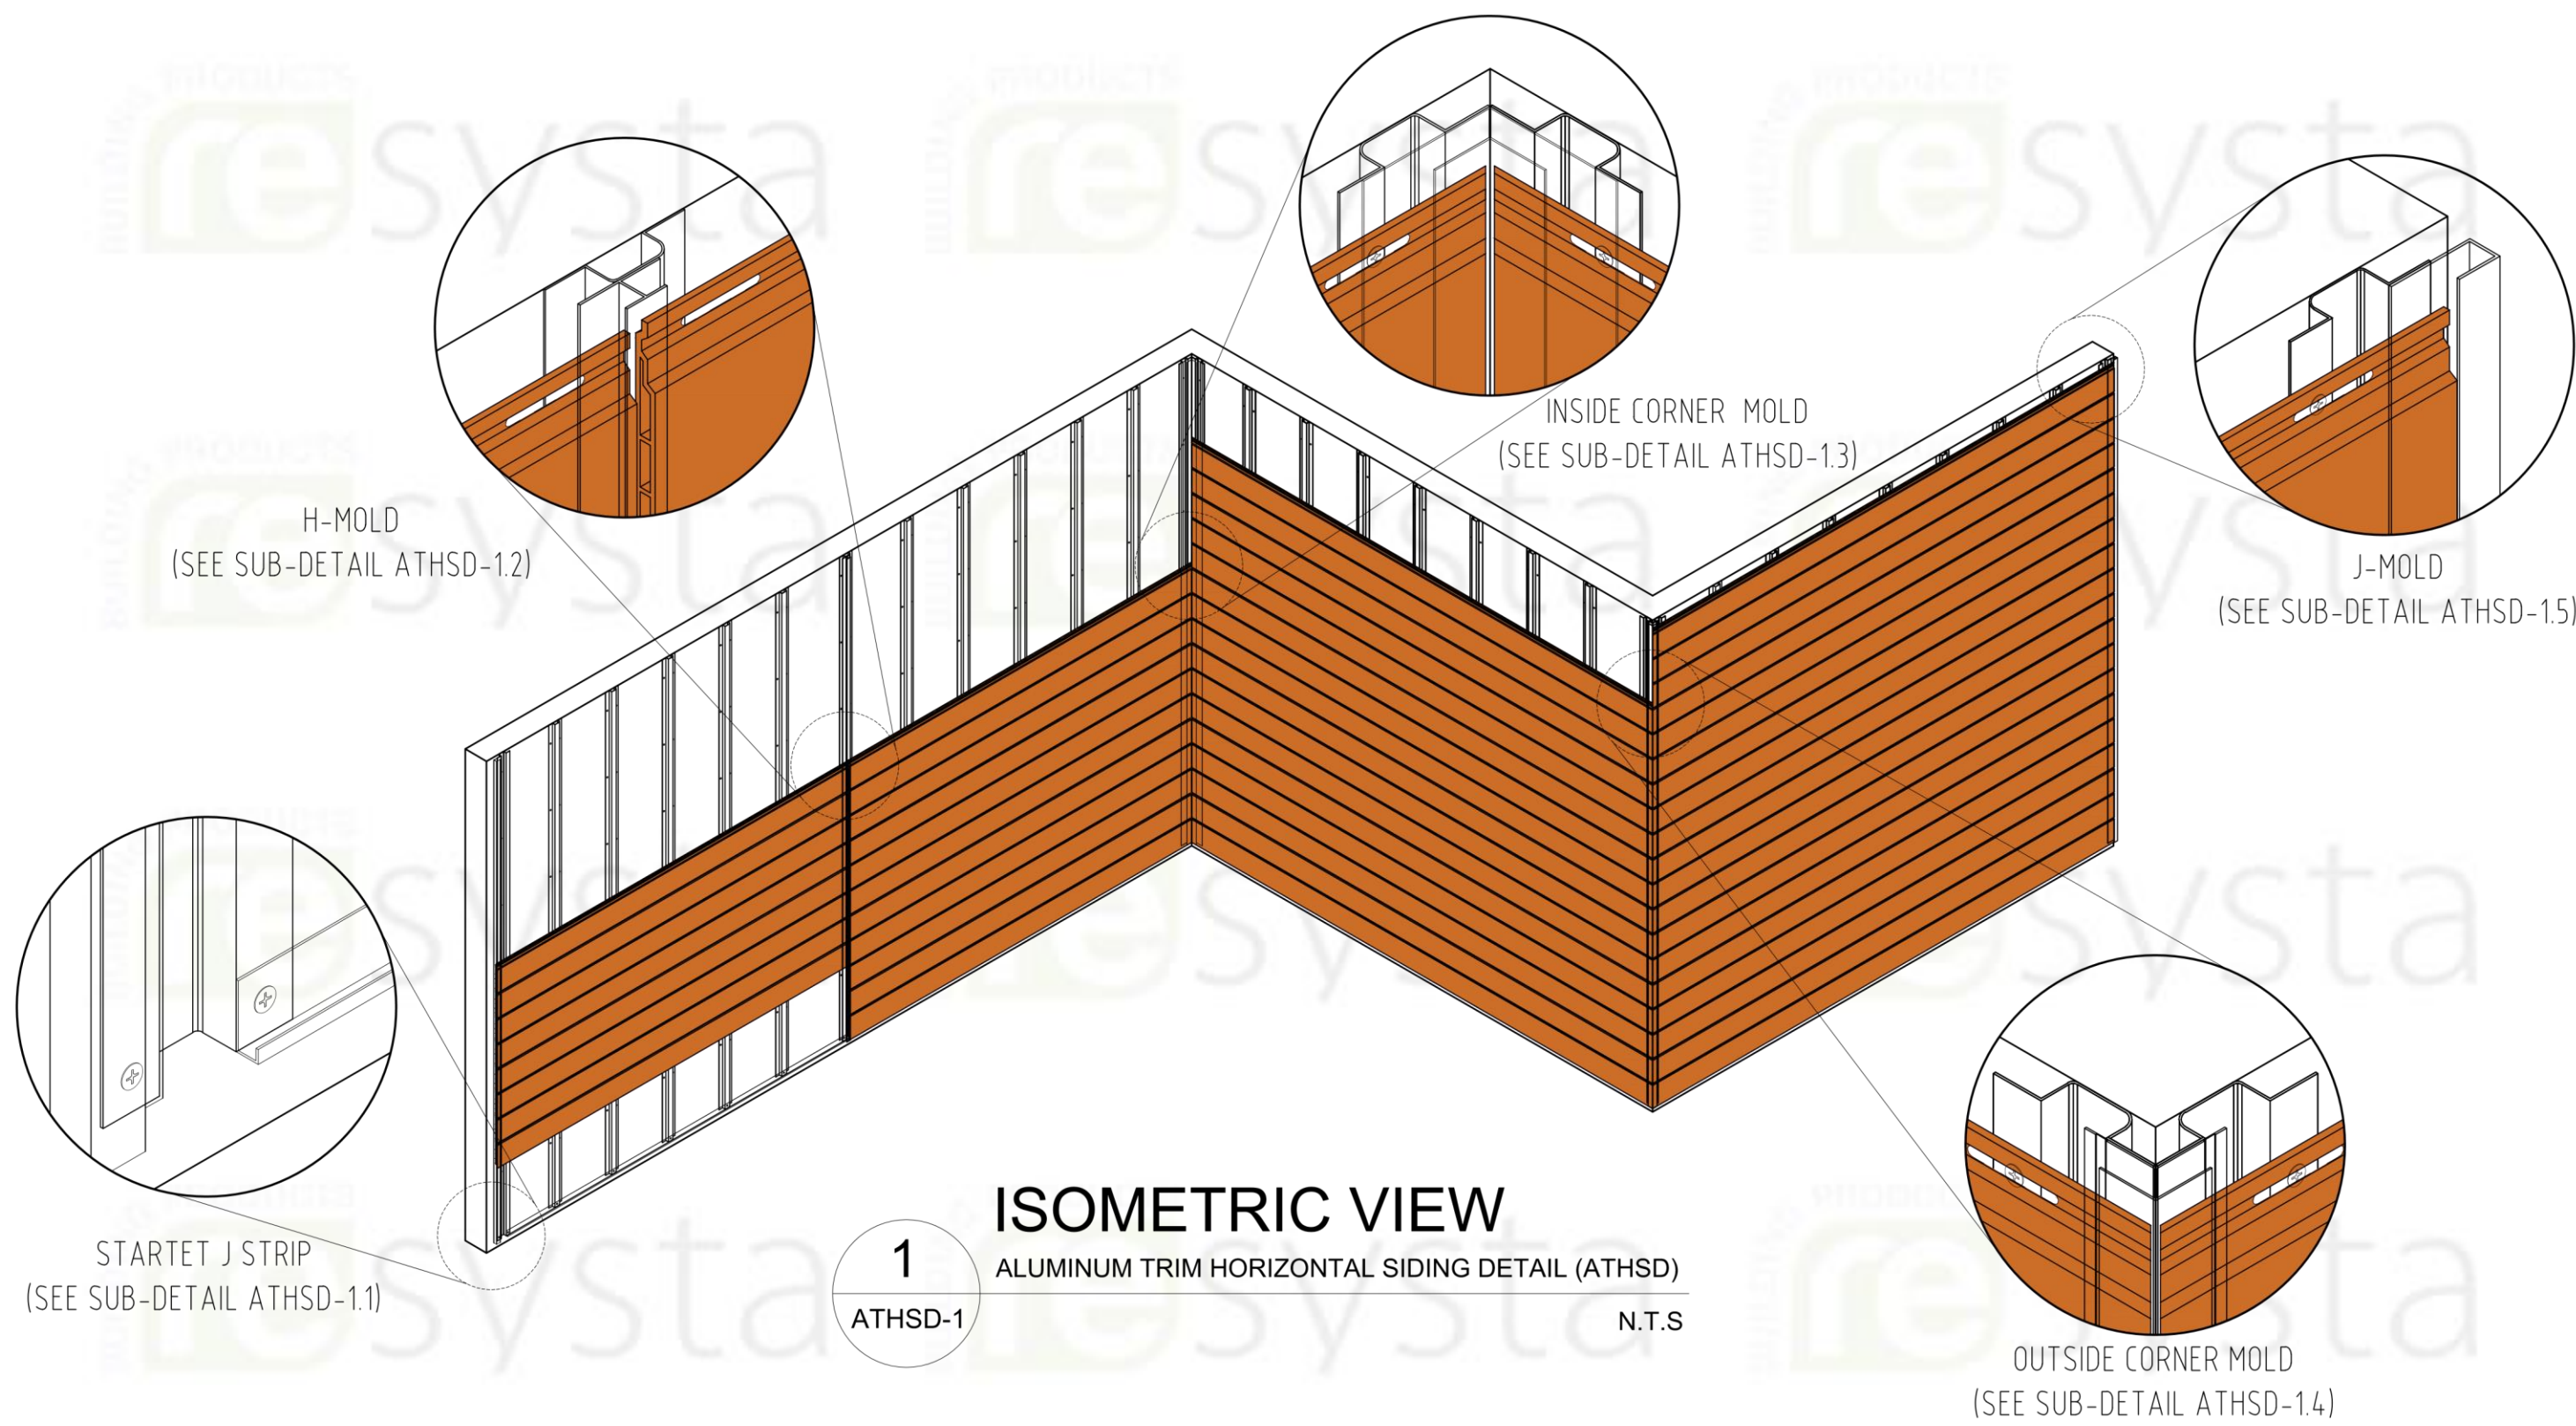

ISOMETRIC VIEW

ALUMINUM TRIM HORIZONTAL SIDING DETAIL (ATHSD)

1
ATHSD-1

N.T.S



NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.


ALUMINUM TRIM
HORIZONTAL SIDING
DETAIL

SPECIFICATION		SHEET CONTENT		SHEET SIZE	DRAWING NO.	CONTINENT
TYPICAL DRAWING DETAIL		ISOMETRIC VIEW		A3	ATHSD-01	RESYSTA USA
		BLOW-UP DETAIL				
				DATE	REVISION	
CAD BY:	CHECKED BY:			03.01.23	0	
M.T.C.	C.R.E.					


DIMENSION LEGEND

Millimeter (mm)
Inches (") / Foot (')


RESSJM10 J Mold
Reverse RESSHTC10
Hat Channel
RESSJS10 Siding Starter
J Strip
Existing Wall

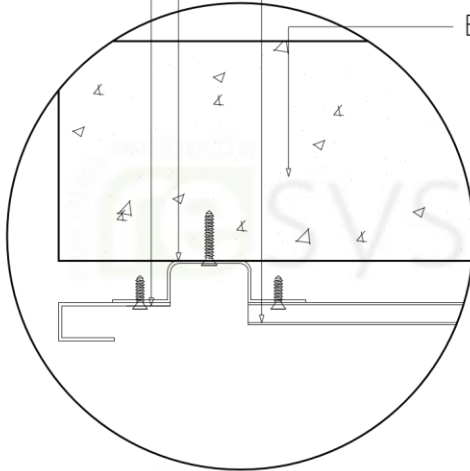

TOP VIEW

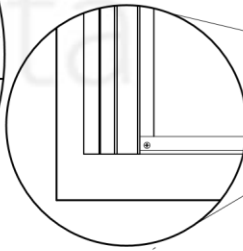


BLOW-UP
ELEVATION

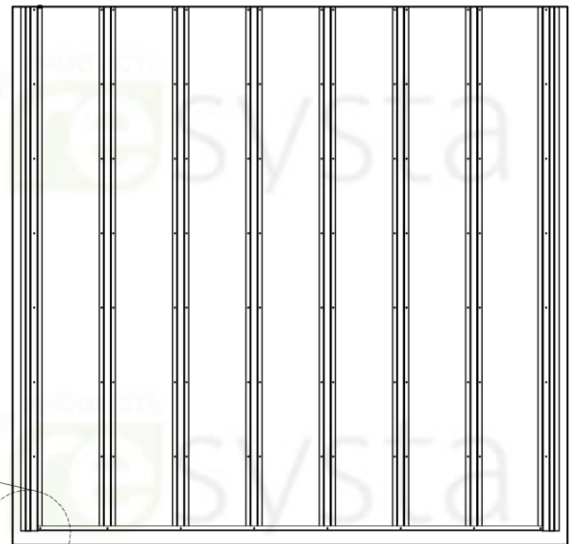


FRONT ELEVATION


RESCPH120612 Siding
RESCPSS25 Stainless
Steel Screw
Reverse RESSHTC10
Hat Channel
RESSJS10 Siding Starter
J Strip
Existing Wall

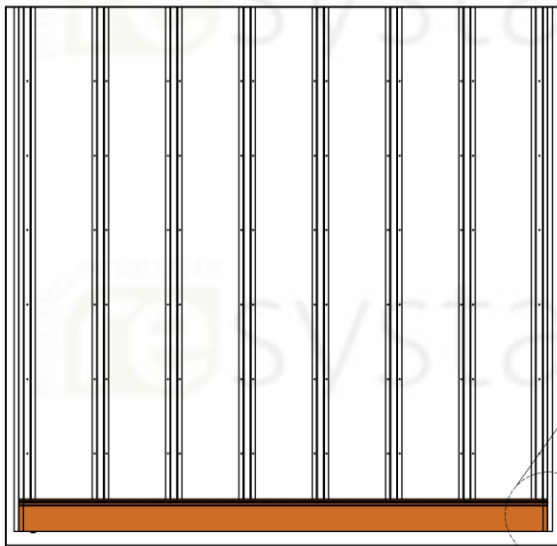

FRONT ELEVATION

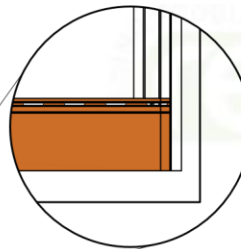

BLOW-UP
ELEVATION

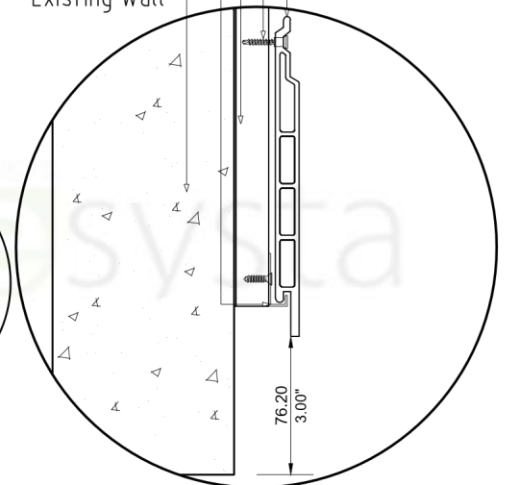

SECTION

Note:

Aluminum starter strip is required to install the Resysta siding board. Attach the starter strip at the bottom of the battens following the fastener and spacing recommendations. The Resysta siding boards will hang 1/2" below the bottom of the starter strip therefore the starter strip should be attached accordingly as per the pre plan layout.

SUB-DETAIL
ATHSD 1.1

N.T.S

BUILDING PRODUCTS
resysta

NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.

TITLE

ALUMINUM TRIM
HORIZONTAL SIDING
SUB-DETAIL

SPECIFICATION

TYPICAL DRAWING DETAIL

SHEET CONTENT

ELEVATION
BLOW-UP DETAIL
SECTION
TOP VIEW

DRAWING NO.

ATHSD-02

CAD BY:

M.T.C.

CONTINENT

RESYSTA
USA

DATE


03.01.23

CHECKED BY:

C.R.E

DIMENSION LEGEND

Millimeter (mm)
Inches (") / Foot (')

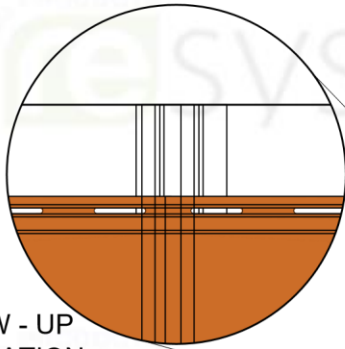


BLOW - UP
ELEVATION

RESSHM10 Siding H Mold

RESSHTC10 Hat Channel


Existing Wall

RESCPH120612 Siding

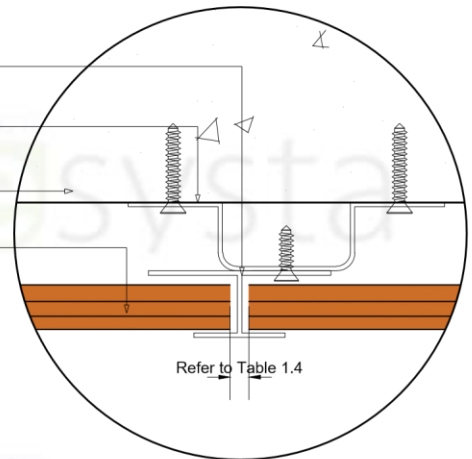

Refer to Table 1.4

TOP VIEW

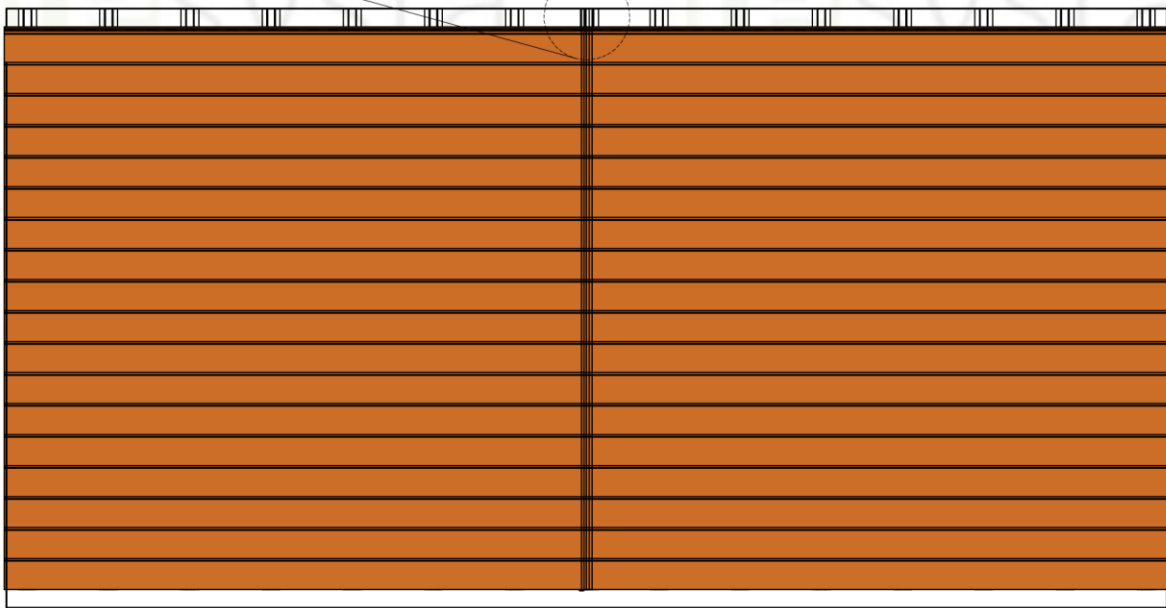

FRONT ELEVATION

SUB-DETAIL ATHSD 1.2


N.T.S

RESSHM10 Siding H Mold

RESSHTC10 Hat Channel

Existing Wall

CPH140 Siding Hollow Profile

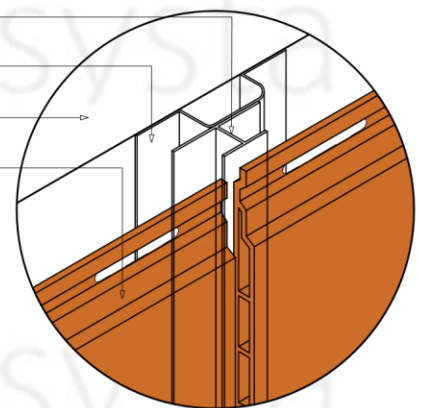

ISOMETRIC VIEW

Table 1.4 "Resysta Expansion"

Resysta Siding Board Gap Guide					
Temperature at Installation	Aluminum Trim Gap of Siding Boards				H-Channel Gap
	Below 30°F	60°F	90°F	120°F	
Amount for Wall cladding Profile - Length of 12 ft.	7/16"	5/16"	3/16"	0"	1/4"

Note :

An H-Channel should be installed at each board abutment joint to cover the ends of the Resysta siding board. This is a option for installations using 3 or more boards abutted end-to-end

BUILDING PRODUCTS
resysta

NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.

TITLE

ALUMINUM TRIM
HORIZONTAL SIDING
SUB-DETAIL

SPECIFICATION

TYPICAL DRAWING DETAIL

SHEET CONTENT

ELEVATION
BLOW-UP DETAIL
TOP VIEW
ISOMETRIC VIEW

DRAWING NO.

ATHSD-03

CAD BY:

M.T.C.

CONTINENT

RESYSTA
USA

DATE


03.01.23

CHECKED BY:

C.R.E


DIMENSION LEGEND

Millimeter (mm)
Inches (") / Foot (')

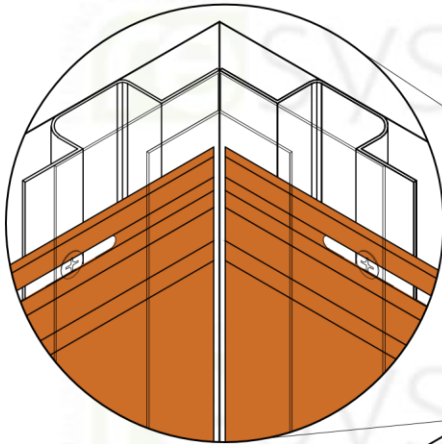


BLOW-UP
ISOMETRIC

RESCPH120612 Siding
RESSIC10 Inside Corner Mold
Gap_ Refer to Table 1.4
Reverse RESSHTC10
Hat Channel
RESCPSS25 Stainless
Steel Screw
Existing Wall

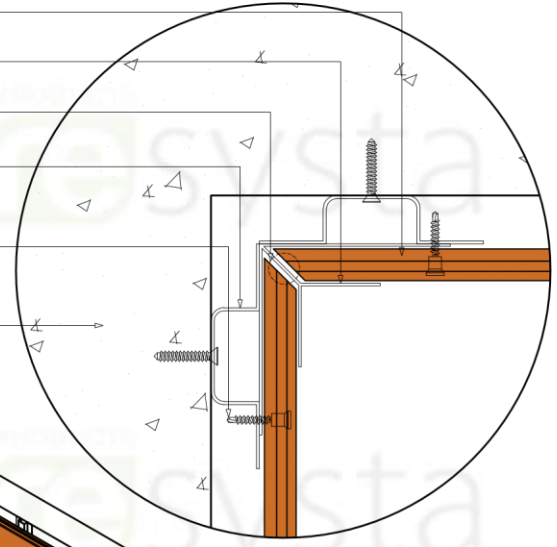

TOP VIEW

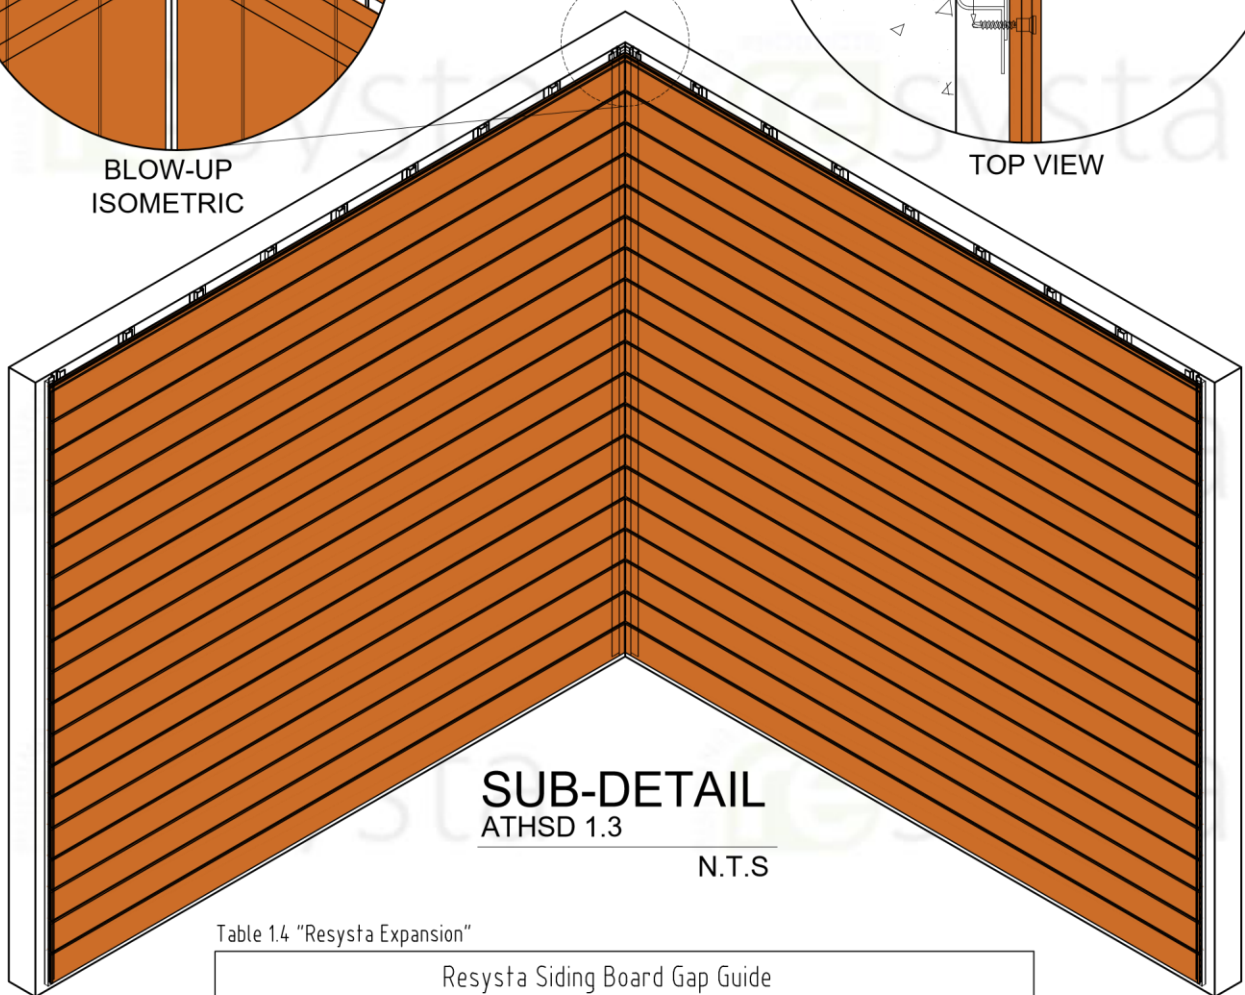

SUB-DETAIL
ATHSD 1.3

N.T.S

Table 1.4 "Resysta Expansion"

Resysta Siding Board Gap Guide					
Temperature at Installation	Aluminum Trim Gap of Siding Boards				H-Channel Gap
	Below 30°F	60°F	90°F	120°F	
Amount for Wall cladding Profile - Length of 12 ft.	7/16"	5/16"	3/16"	0"	1/4"

ISOMETRIC
VIEW

Note :

Inside corner trim should be pre-applied prior to installing siding boards. The starter strip for the first board should be installed butted against the corner trim, not overlapping the corner trim attachment. Follow the gap guide when installing the siding board to allow for expansion and contraction within the inside corner trim.

BUILDING PRODUCTS
resysta

NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.

TITLE

ALUMINUM TRIM
HORIZONTAL SIDING
SUB-DETAIL

SPECIFICATION

TYPICAL DRAWING DETAIL

SHEET CONTENT

ISOMETRIC VIEW
BLOW-UP ISOMETRIC
TOP VIEW

DRAWING NO.

ATHSD-04

CAD BY:

M.T.C.

CONTINENT

RESYSTA
USA

DATE


03.01.23

CHECKED BY:

C.R.E


DIMENSION LEGEND

Millimeter (mm)
Inches (") / Foot (')

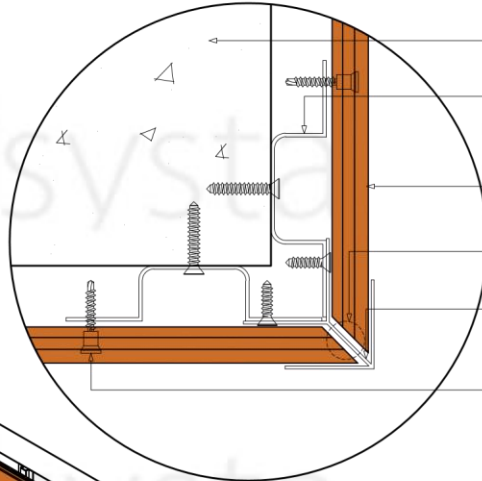

TOP VIEW

Existing Wall
Reverse RESSHTC10
Hat Channel
RESCPH120612 Siding
Gap_Refer to Table 1.4
RESSOC10 Outside Corner Mold
RESCPS25 Stainless
Steel Screw

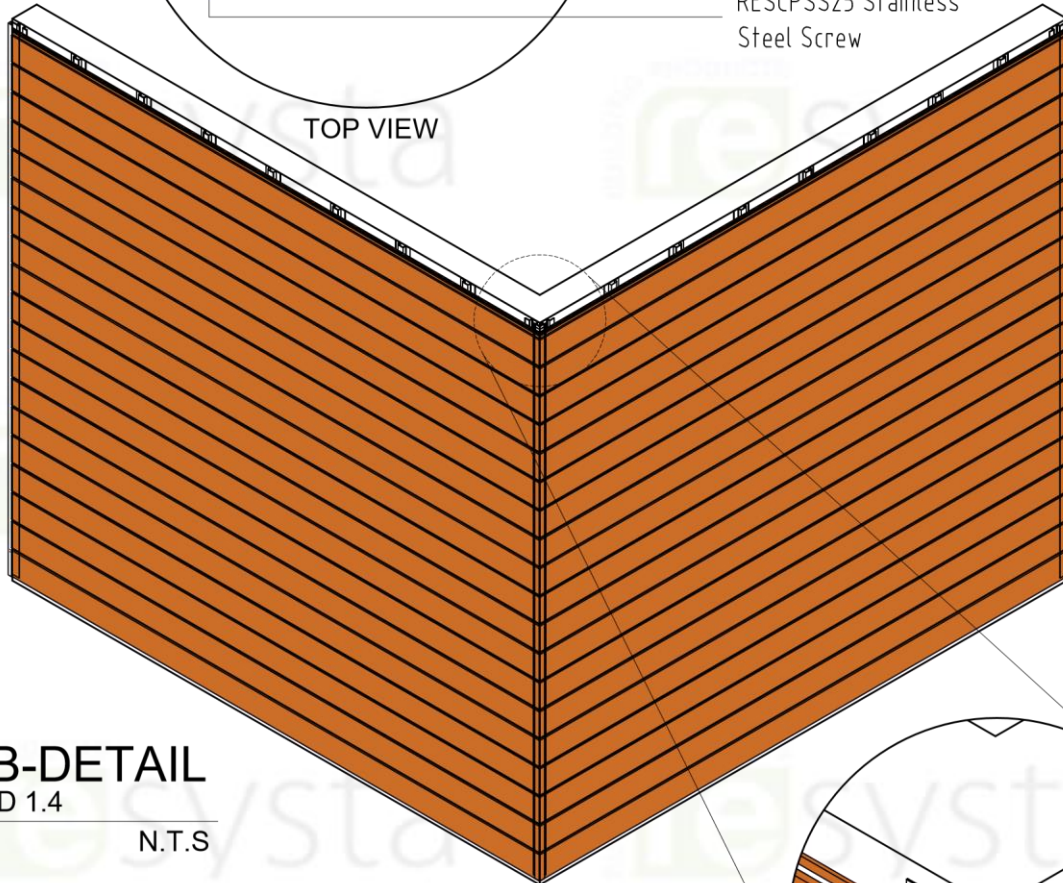


ISOMETRIC VIEW

SUB-DETAIL ATHSD 1.4

N.T.S

Table 1.4 "Resysta Expansion"

Resysta Siding Board Gap Guide					
Temperature at Installation	Aluminum Trim Gap of Siding Boards				H-Channel Gap
	Below 30°F	60°F	90°F	120°F	
Amount for Wall cladding Profile - Length of 12 ft.	7/16"	5/16"	3/16"	0"	1/4"

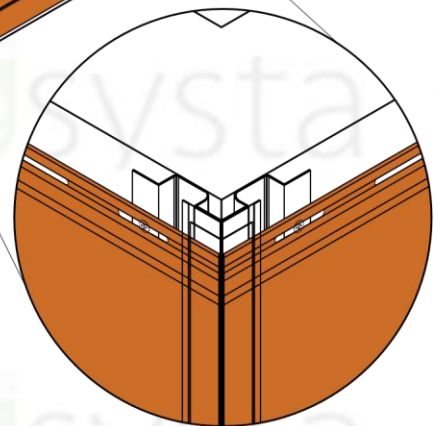

BLOW-UP ISOMETRIC

Note :

Outside corner trim should be pre applied prior to installing siding boards. The starter strip for the first board should be installed butted against the corner trim, not overlapping the corner trim attachment. The siding board end that is inserted into the outside corner should be miter cut at a 45 degree angle to match up with the outside corner internal web.

BUILDING PRODUCTS
resysta


NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.

TITLE	SHEET CONTENT	CONTINENT
ALUMINUM TRIM HORIZONTAL SIDING SUB-DETAIL	ISOMETRIC VIEW	RESYSTA USA
	BLOW-UP ISOMETRIC	
	TOP VIEW	
SPECIFICATION	DRAWING NO.	DATE
TYPICAL DRAWING DETAIL	ATHSD-05	03.01.23
	CAD BY:	CHECKED BY:
	M.T.C.	C.R.E

DIMENSION LEGEND

Millimeter (mm)
Inches (") / Foot (')

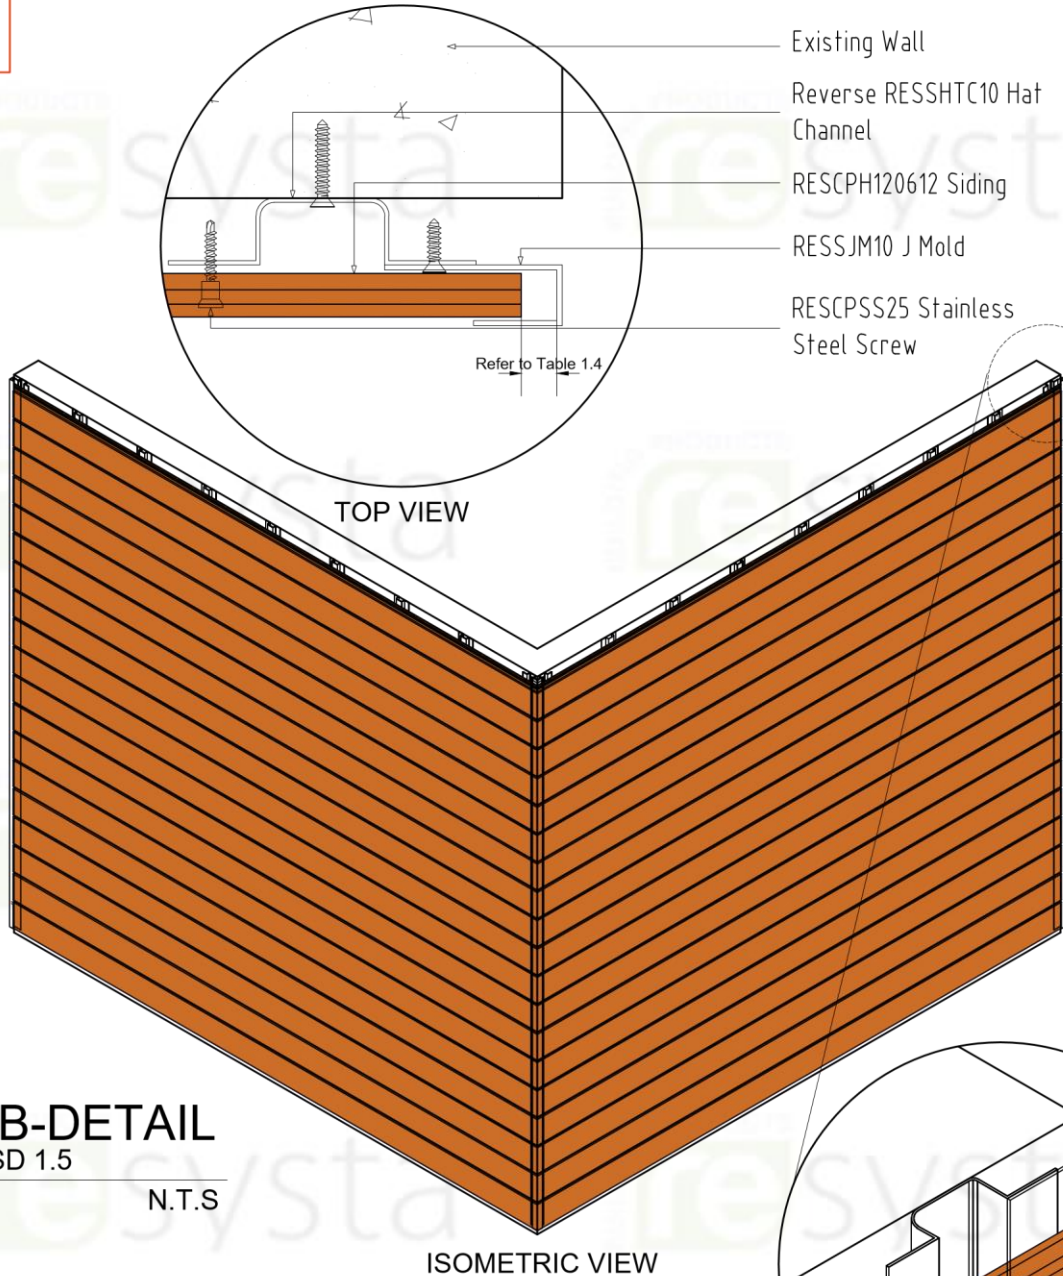


SUB-DETAIL ATHSD 1.5

N.T.S

Table 1.4 "Resysta Expansion"

Resysta Siding Board Gap Guide					
Temperature at Installation	Aluminum Trim Gap of Siding Boards				H-Channel Gap
	Below 30°F	60°F	90°F	120°F	
Amount for Wall cladding Profile - Length of 12 ft.	7/16"	5/16"	3/16"	0"	1/4"

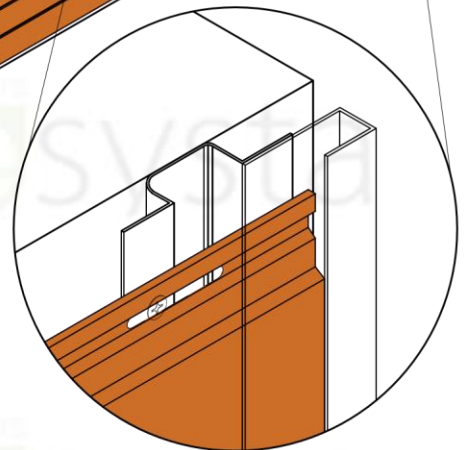

BLOW-UP ISOMETRIC

Note :

When a siding board in either a horizontal or vertical application terminates into a wall, eave, window, door etc. a J-channel should be used to cover the exposed end of the siding board. The J-channel should also be used along the bottom of a vertical installation. J-channel trim should be pre-applied prior to installing siding boards.

BUILDING PRODUCTS
resysta

NOTE

THIS DRAWING AS AN INSTRUMENT OF SERVICE, IS THE PROPERTY OF RESYSTA AND AS SUCH MUST NOT BE REPRODUCED OR COPIED IN PART OR IN WHOLE WITHOUT THE PERMISSION OF THE AUTHOR.

TITLE	SHEET CONTENT	CONTINENT
ALUMINUM TRIM HORIZONTAL SIDING SUB-DETAIL	ISOMETRIC VIEW	RESYSTA USA
	BLOW-UP ISOMETRIC	
	TOP VIEW	
SPECIFICATION	DRAWING NO.	DATE
TYPICAL DRAWING DETAIL	ATHSD-06	03.01.23
	CAD BY:	CHECKED BY:
	M.T.C.	C.R.E